

-19.413.44

Retro Fit Hinge for Hatch Flyscreen Fitting Instructions

B2184 Issue E

LEWMAR

Retro-fit Flyscreen Fitting Instructions (Trim in Position)

B2184 Issue E

fig. 1




2. LOCK & SPACER

If locks were not originally fitted, remove fastenings in the locations shown. Replace with the lock assembly provided. Tighten the screws but ensure the lock can still swivel. See fig 1.

2. FRAME HINGE

Unscrew original spacers and caps. Replace with new hinge bracket assembly. See fig 2.


fig. 2

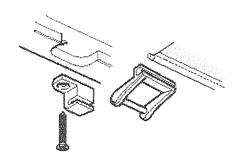

3. LOCKING

The flyscreen is held by placing its mesh face towards the trim and rotating the locks 45 degrees to hold, see fig. 3

 fig. 3



USER NOTES

- Use soapy water and a soft cloth. Do not under any circumstances use solvent cleaners.
- When the flyscreen is not in use, place in a safe area to protect the mesh.


Hatch Trim & Flyscreen Fitting Instructions

B2184 Issue F

1. TRIM MOLDING

Adjust the trim molding to suit your deck thickness, see fig. 1 below, by cutting the inner edge only.

fig. 1

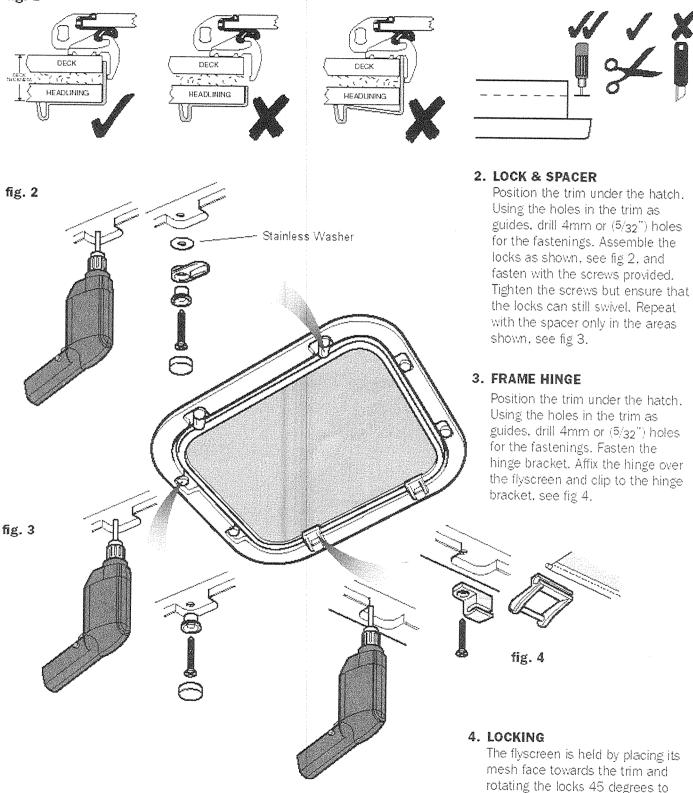



USER NOTES

- Use soapy water and a soft cloth. Do not under any circumstances use solvent cleaners.
- When the flyscreen is not in use, place in a safe area to protect the mesh.



hold, see fig. 5

