

OSCULATI

PETROL FILTER + WATER/FUEL SEPARATOR

Use with reusable bowl

Code: 17.661.30-31

- Aluminium head, transparent tank, rapid drain system
- 2 hose connector included \varnothing mm 8
- Height: 230 mm - overhang: 90 mm - \varnothing 75 mm
- 10-micron spare cartridge: code 17.661.31
- Spare water tray: code 17.661.32

INSTRUCTIONS

To drain water:

- Loosen drain screw to drain bowl of water.
- Tighten drain screw.
- Run engine and check for fuel leakage.

To Replace Element:

- Drain the unit by loosens the drain screw.
- Loosen and remove the filter element.
- Loosen and remove the bowl from filter element. Please note the bowl is reusable, do not dispose unless broken.
- Wipe O-ring gland clean, and coat bowl's sealing O-ring with clean oil or grease and place it back to the gland. Then tighten the bowl onto filter element firmly by hand.
- Coat filter element's sealing O-ring with clean oil or grease and attach filter element onto filter head, and then tighten securely by hand.
- Run engine and check for fuel leakage.

SAFETY WARNING

Periodically check fittings and filter element for leaks.

Be careful when changing fuel filter element, gasoline is extremely flammable and highly explosive under certain conditions.

Avoid spiling gasoline.

Always stop engine and do not smoke or allow open flames in the area while changing filter element.